


OWNER'S MANUAL

Tilt Soft Form Series

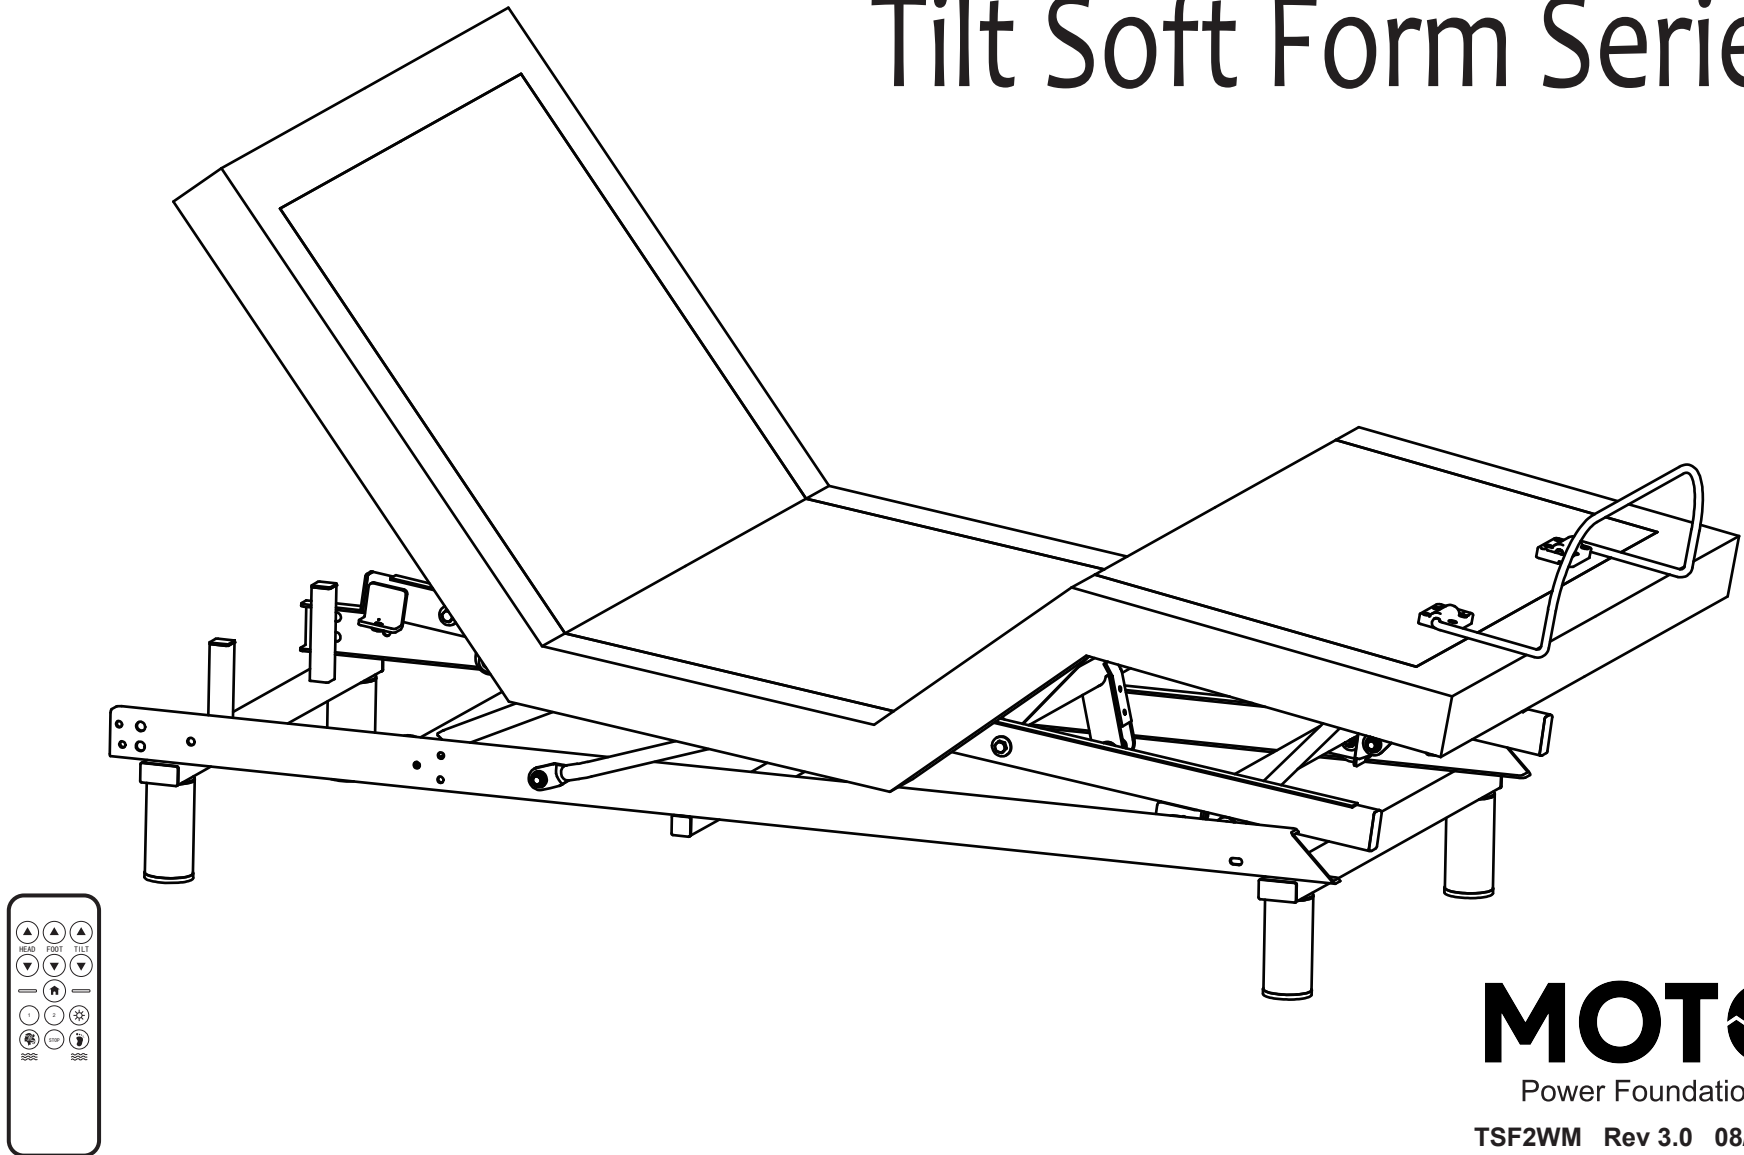


MOTO

Power Foundations

TSF2WM Rev 3.0 08/2023

Installation Guide

1 Open the box lid.

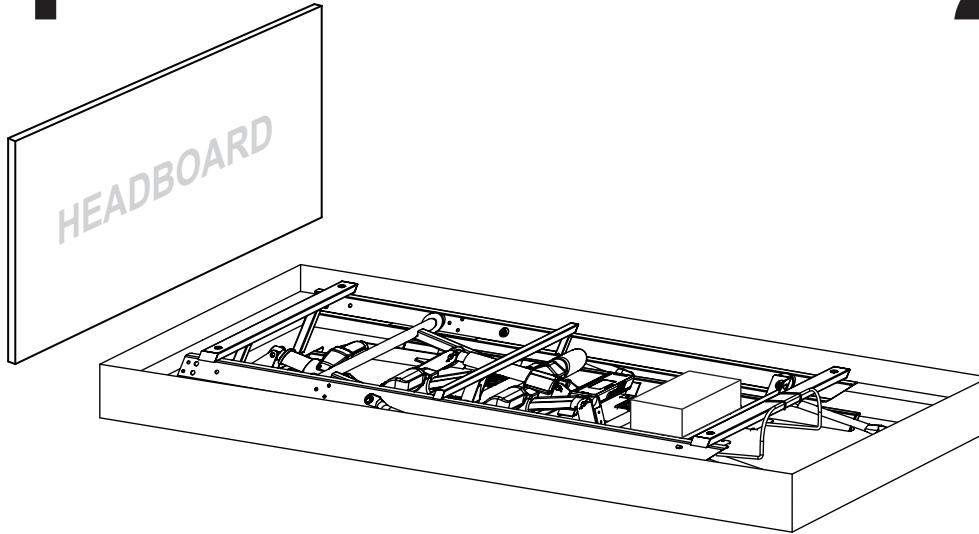


2 Take out all the accessories from the packaging and put them aside. All electronics and components that need to be installed are located in boxes under the foundation or attached to the frame. Before discarding the packing materials, ensure that all the parts are accounted for.

Mattress Retainer Bar



x1

Accessories Box

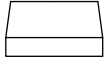

x1

ACCESSORIES BOX:

Legs




x4

Remote Control



x1

Power Supply with Battery Backup Box

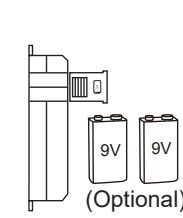

x1

Sync Cord (TXL/T/CKS/TXL+ Only)




x1

AAA Batteries




x3

AC Power Cord




x1

3 Install 4 legs, make sure the legs are tight.

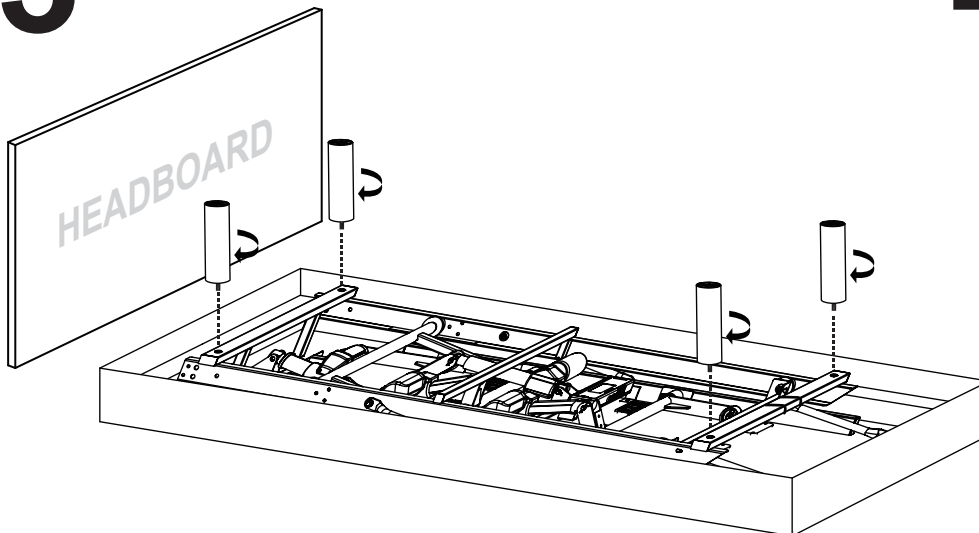


4 Take the bed out of the box, turn over onto 4 legs. Remove the box. Uncoil the DC power cord (connected to the control box) and put it to the side of the bed.

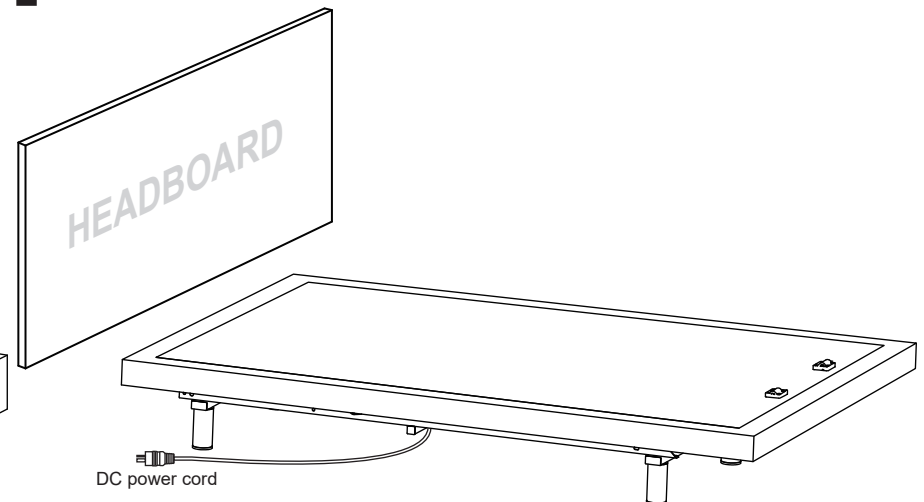

5


Install the mattress retainer bar one side after another.

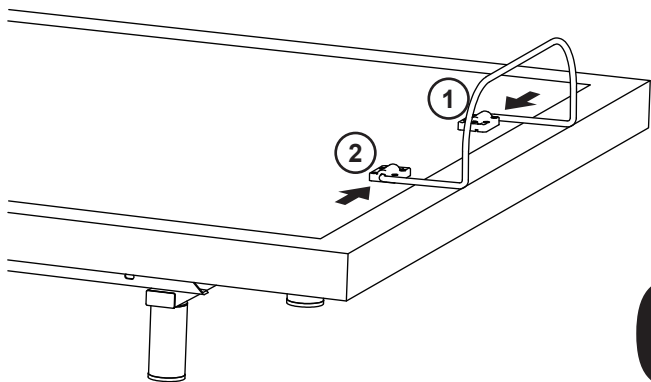

6

Uncoil the AC power cord, connect the DC power cord to the power supply and then connect the power supply to the AC power source.

AC Power Source

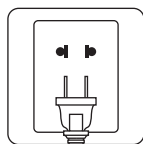



AC Power Cord



Power Supply



DC Power Cord

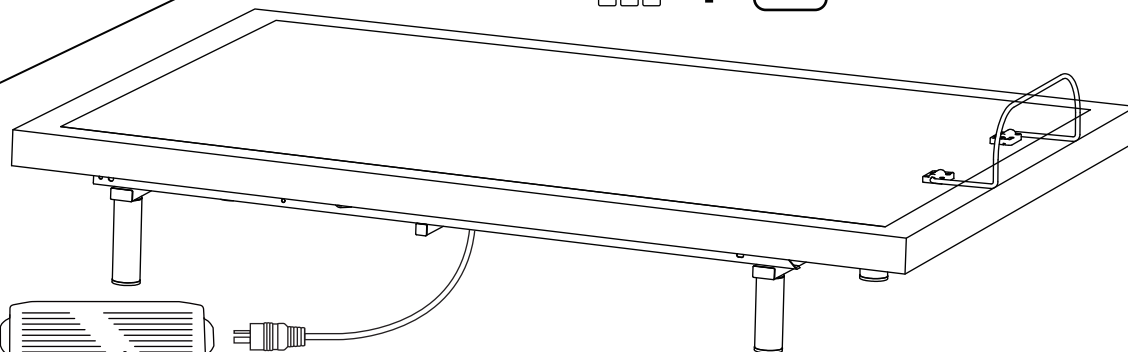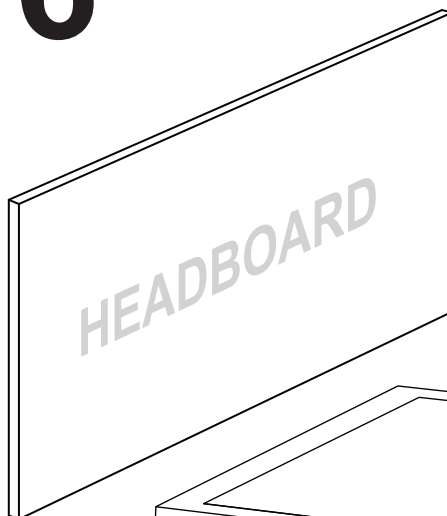

Insert the batteries into the remote control.




+




DONE!

Remote Control Instructions

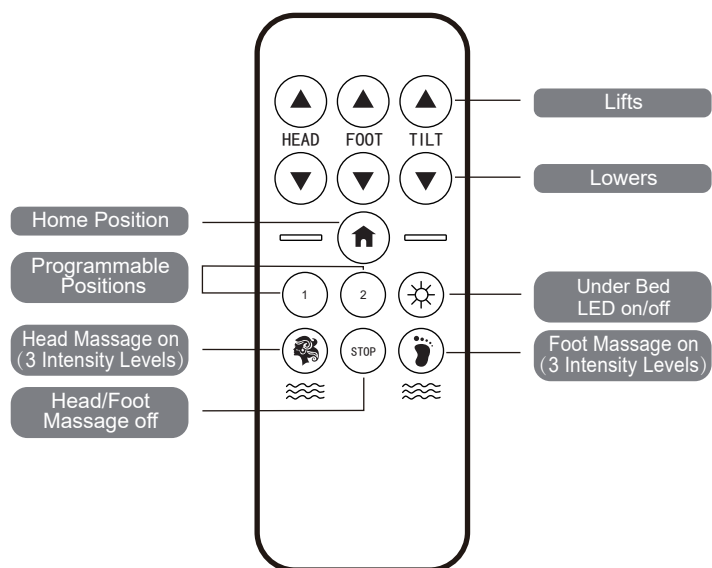

Pairing Remote

The original remote that comes in the box is already paired to the foundation. No further action is required. In the event when the remote is not paired with the foundation, follow the pairing instructions below.

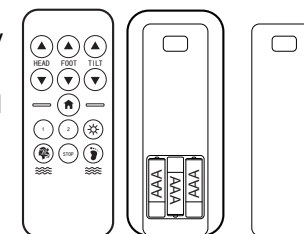

- STEP 1:** Make sure the batteries are good. Replace them when needed.
- STEP 2:** Unplug the power cord from the power source. If 9V backup batteries were installed in the power supply, remove them.
- STEP 3:** Press and hold **HEAD** (down arrow) and (up arrow) simultaneously until the blue backlights of the remote control are off.
- STEP 4:** Plug the power cord back into the power source. You will hear an activation sound in 2 seconds, indicating the remote is paired to the power foundation.

Setting Programmable Position

- STEP 1:** Adjust the head, foot and lumbar to your desired position.
- STEP 2:** Press and hold the **LED on/off** button (sun icon) first, then press and hold one of the picture programmable buttons (1) (2) for 5 seconds until you hear a beep sound. The position is then saved.
- STEP 3:** To adjust a saved position, repeat step 1 and 2 and the new position will be saved.

ADJUST

- (up arrow) This button lifts the head/foot/tilt section of the foundation.
- (down arrow) This button lowers the head/foot/tilt section of the foundation.

SETTING PROGRAMMABLE POSITION

- (1) One touch programmable positions.
- (2)


MESSAGE FEATURES

- (head and massage icon) Turn on the head massage. Cycle through 3 massage intensities.
- (foot and massage icon) Turn on the foot massage. Cycle through 3 massage intensities.
- (STOP icon) Turn off the head/foot massage.

ONE TOUCH BUTTON

- (house icon) One touch flat position.
- (sun icon) One touch underneath LED lighting on/off.


Electronics Quick Reference Guide

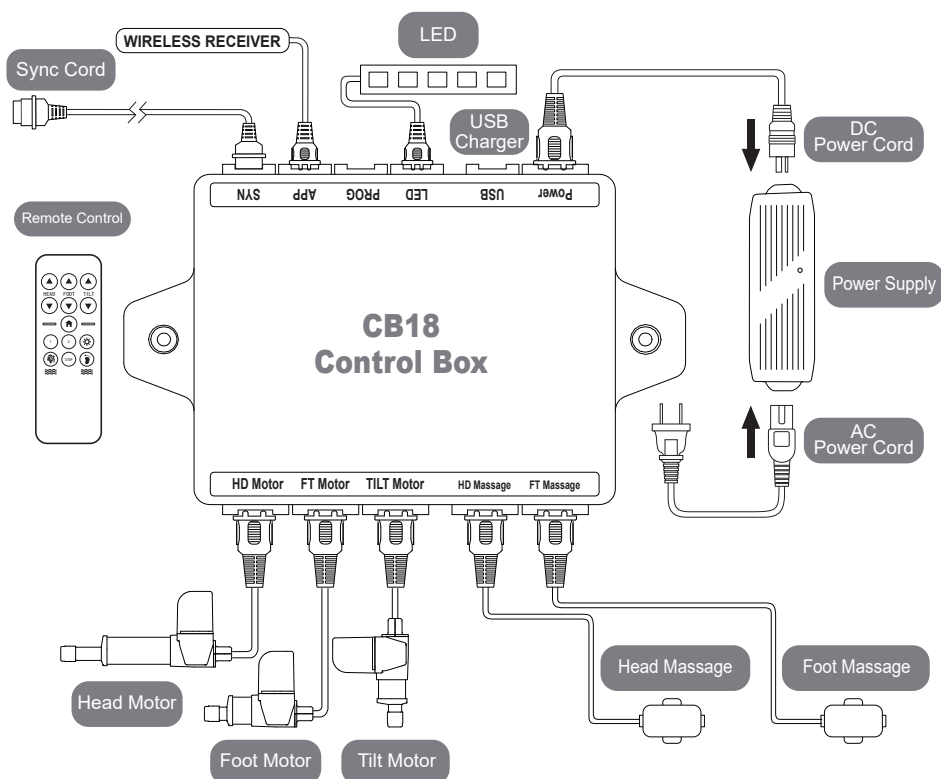

If simultaneous operation of two foundations is desired, please follow the steps listed below.

Sync cable is not required if both adjustable bases are equipped with V2.0 or newer remote controls. If the bases are equipped with V2.0 remote controls, follow the “Wireless Syncing Instruction”.


Model No.:*****
***** V2.0

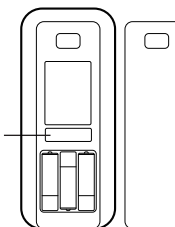

If the adjustable bases are not equipped with V2.0 or newer remote controls, follow the “Synchronizing Two Foundation with Sync Cord” instruction.


Wireless Syncing Instruction

- STEP 1: Make sure both remotes are individually paired to the foundation. If the remote is not paired with the foundation, follow the pairing instructions.
- STEP 2: Make sure both foundations are at home (flat position).
- STEP 3: Press and hold **HEAD** (▲) and (●) on both remotes at the same time for 5 seconds, or/until the blue **BACK LIGHTS FLASH**.

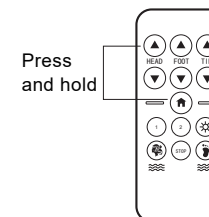


UN-SYNC Two Foundations

Press and hold **HEAD** (▲) and **HEAD** (▼) on both remotes at the same time for 5 seconds, or/until the blue **BACK LIGHTS FLASH**.

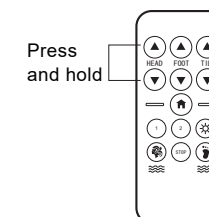

Synchronizing Two Foundations with Sync Cord

- STEP 1: Unplug foundations from the power source.
- STEP 2: Connect the male ends of the sync cord to the female sync plugs of the control boxes (Refer to below illustration).
- STEP 3: Plug foundations back into the power source.
- STEP 4: Check to ensure all cords are securely attached. Either remote will operate both foundations simultaneously.

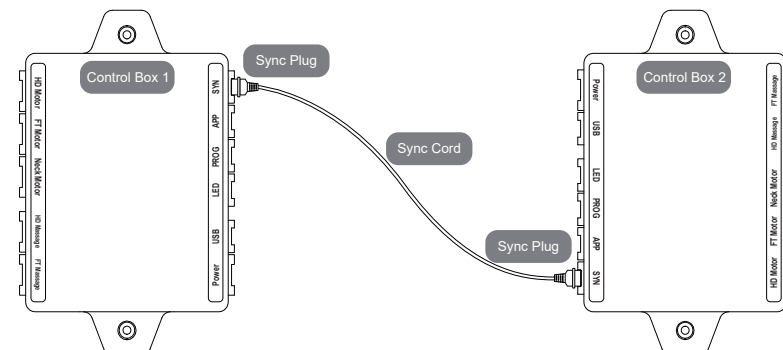

MotoSleep Mobile APP (Optional)

General Information

MotoSleep Mobile APP is a mobile application to control the MotoSleep Power Foundation with mobile devices. The application is available for both iOS and Android based smart devices.

The MotoSleep Mobile APP uses the latest technology to communicate with your MotoSleep Power Foundation. Make sure your mobile devices has the pairing function for the APP to work correctly.

Install the MotoSleep APP

IOS







- Open APP Store on your IOS device
- Tap the Magnify Glass Icon and search with the keyword **MOTOSLEEP**
- Tap on **GET** and **INSTALL** to install the APP
- Wait for the download/installation to be complete

Android



- Open www.motosleep.com from your browser.
- Scroll down to the bottom of the page and press download.
- In the download page, tap the download button to download the app.
- Open the download file and install the app.

The Built-in Owner's Manual at your fingertip

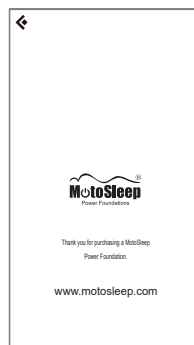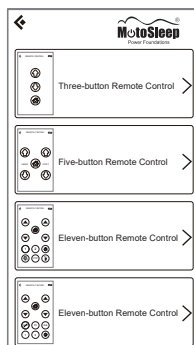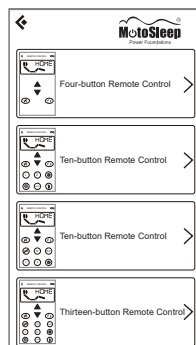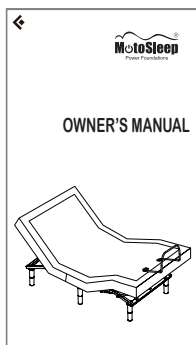


Device Pairing


Before you start. Switch on the pairing function on your mobile device. Make sure your MotoSleep Power Foundation is correctly connected and is power-on.

The MotoSleep APP will automatically pair your MotoSleep Power Foundation once you start the APP and does not require additional settings.

MotoSleep APP Home Screen

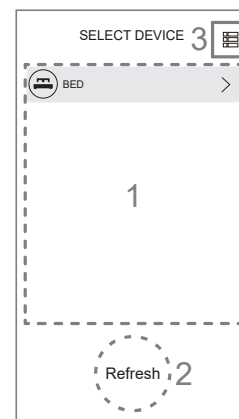

Home Screen

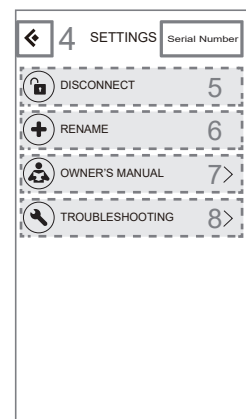


Settings Page

Home Screen	
1	List of MotoSleep Products within the connection range*
2	Tap the Refresh Button to refresh the MotoSleep Products List
3	Enter the Settings Page
Settings Page	
4	Back to the Home Screen
5	Disconnect from the paired MotoSleep Product
6	Rename your MotoSleep Power Foundation of your choice
7	Owner's Manual Page
8	Troubleshooting
9	Serial Number of the control box

* The effective connection range is $\pm 10m$

MotoSleep APP Remote Control

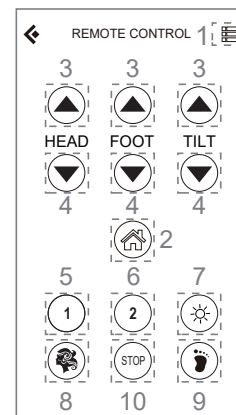

Remote Control	
1	Enter the Setting Page
2	One touch flat Position
3	Head/Foot/Tilt Lifting function
4	Head/Foot/Tilt Lowering function
5	Programmable Position 1
6	Programmable Position 2
7	Under Bed Lighting
8	Head Massage (3 different intensities)
9	Foot Massage (3 different intensities)
10	Massage Off Button

* Remote interface varies in between different MotoSleep Power Foundation models. If you wish to disconnect from the current paired Power Foundation, Enter the Settings Page and tap the Disconnect button.

Product Serial Number

Each power foundation has its unique serial number. The serial number can be found on the metal frame near the legs at the foot area.

